PureZone™

Personal Air Filtration System

Clinically Proven

Allergy Relief

Comfortable & Convenient

Instructions for Installation and Use

www.purezone.com

Contents

Introduction 3
Parts List 4
Installation 6
Fan Unit Assembly 8
Dual Chambered Pillowcase Assembly 16
Operation 18
Cleaning and Maintenance 20
Troubleshooting 21
Specifications 22
Reordering information 24
Technical Support 24

It's as Easy as 1-2-3

1. With the touch of a button, bedroom air enters the fan unit.
2. Over 99.97% of airborne allergens and pollutants are removed through the charged-fiber HEPA filter.
3. Purified air passes through the pillowcase creating an allergen-free breathing zone while serving as a barrier against dust mites.

Introduction

Congratulations! You've taken the first step to getting a better night's sleep. The PureZone Personal Air Filtration System protects your breathing zone from allergens and pollutants by utilizing a combination therapy of pillow dust mite encasement and high efficiency particulate air (HEPA) filtration. Sleep on your favorite pillow and experience the allergy symptom relief you deserve.

Definition of Symbols

Caution, consult accompanying documents

Heater Temperature

Fan Speed

Change filter

Power

Read and Save These Instructions

Fan Unit

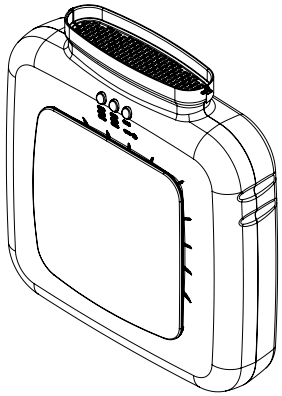

Dual Chambered Pillow Case

(either standard, queen, or king sized)

Charged-Fiber HEPA Filter

Remote Control

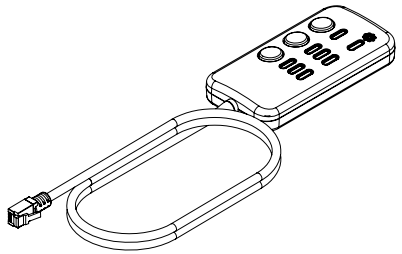

Mounting Bracket

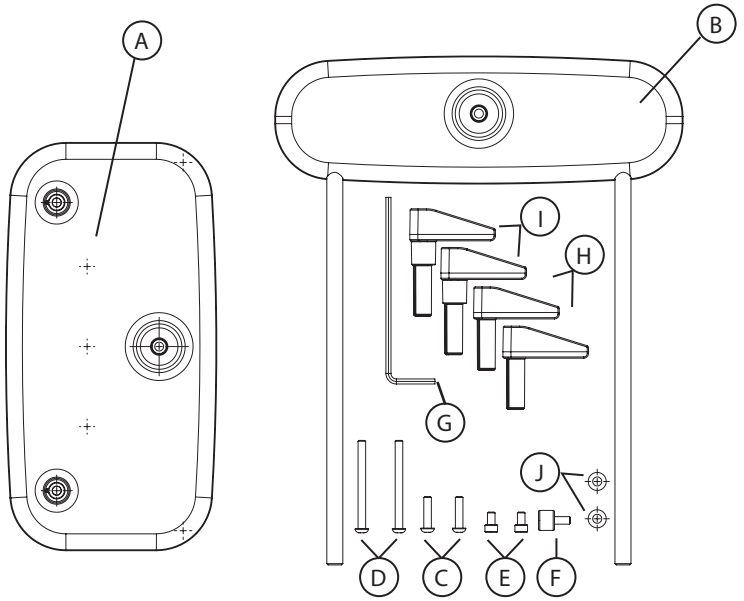

(A) 1-Base

(B) 1-Back

(C) 2-Long cap head screws (allen)

(D) 2-Pan head screws* (phillips)

(E) 2-Short cap screws (allen)

(F) 1-Thumb screw

(G) 1-5 mm Allen wrench

(H) 2-narrow bed rail hooks

(I) 2-wide bed rail hooks

(J) 2-washers

* Note: Phillips head screw driver not included.

The Fan Unit Can be Mounted in Three Positions

Option A: Floor Stand Mount
Accommodates beds up to 36 inches in height

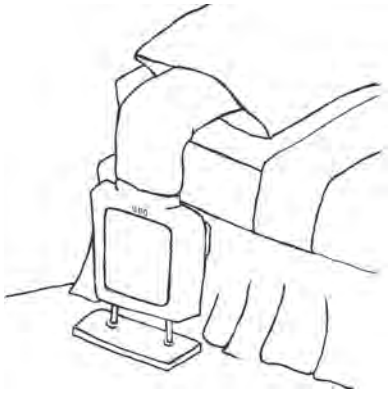

Option B: Under Mattress Mount

Option C: Bed Rail Mount
Fits bed rails from 0.75 to 2.75 inches

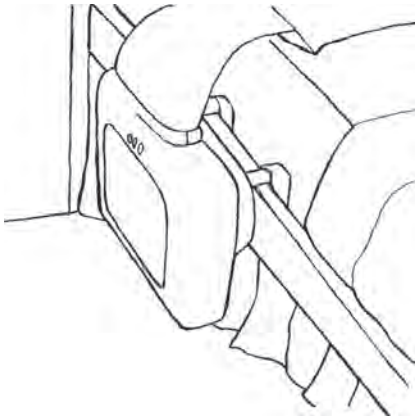

How to Select the Mounting Method

1. For most bed styles, we recommend using Option A, the floor stand mounting method. This method works best for beds that are less than 36 inches in height.
2. Option B is the under mattress mount , which works well for beds where the mounting bracket can be slid under the mattress.
3. The bed rail mount option can be used on beds that have side rails from 0.75 to 2.75 inches wide where the under mattress or floor stand mounts are not ideal.

⚠ WARNING: Use of bed rail mount on elevated beds, such as an upper bunk bed, is not recommended and may result in product damage or injury if the fan unit becomes dislodged.

Four Basic Steps to Install the PureZone System

1. Connect remote to fan unit
2. Assemble mounting bracket and secure fan unit to bracket
3. Insert a pillow into pillowcase pocket and HEPA filter into sleeve
4. Connect pillowcase assembly to fan unit and plug in power cord

⚠ CAUTION: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

Fan Unit Assembly

Connect Wired Remote to Jack on Underside of Fan Unit

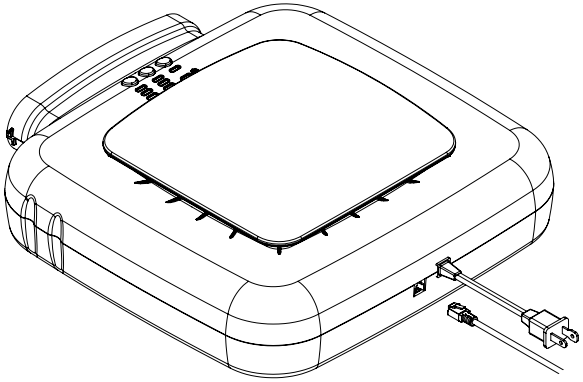

Remote Magnetically Attaches to Either Left or Right side
(depends on which side of bed is selected for set up)

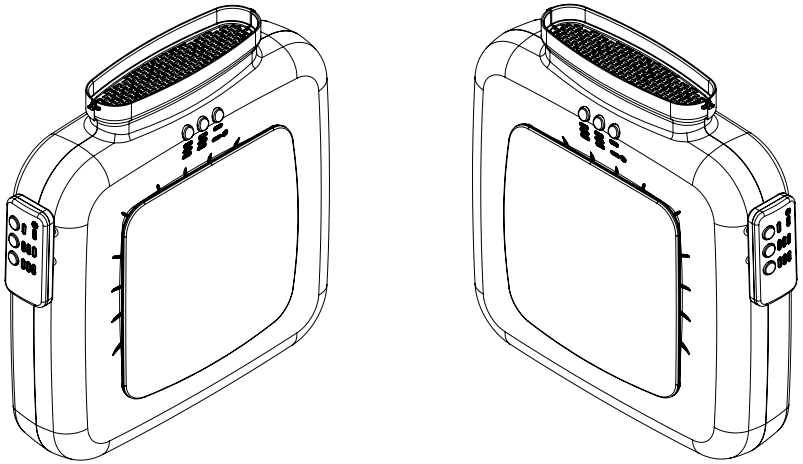

Choose Fan Unit Mounting Option

A. Floor Stand Mount
B. Under Mattress Mount
C. Bed Rail Mount

Option A: Floor Stand Mount

Assemble Floor Mounting Bracket

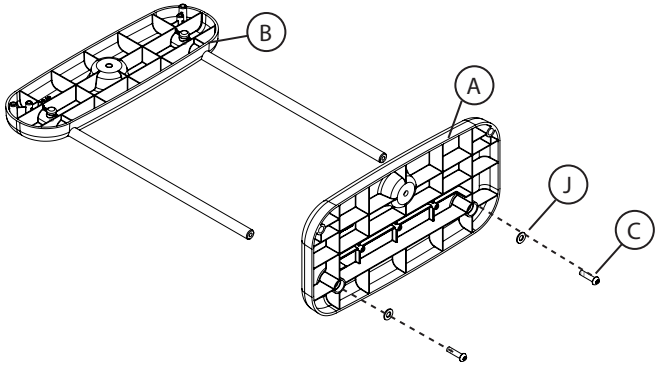

WARNING: Incorrect alignment of the back piece may cause the floor mount to tip over and result in damage.

Secure Fan Unit to Mounting Bracket

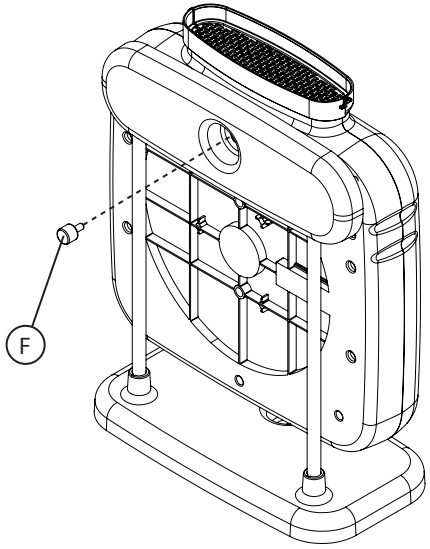

NOTE: Adjust fan unit height on bracket by selecting appropriate threaded insert (shown next page) such that the top of the unit is several inches below the top of the mattress.

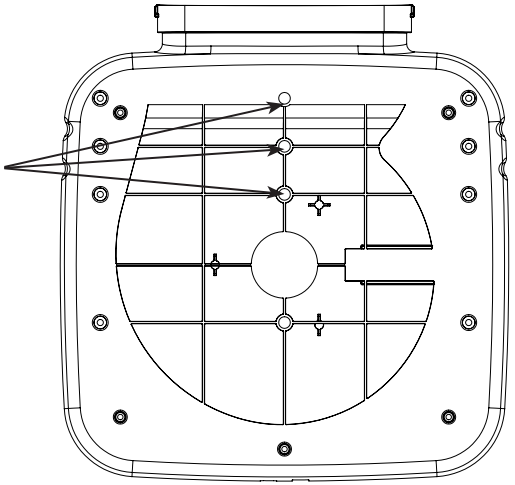

Place Fan Unit Next to Bed

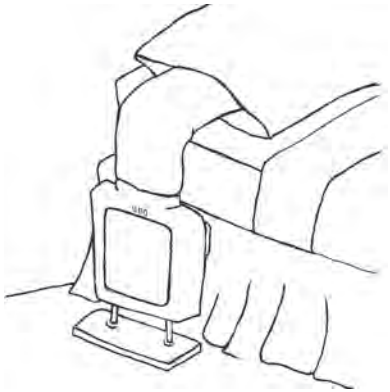

Option B: Under Mattress Mount

Assemble Under Mattress Mounting Bracket

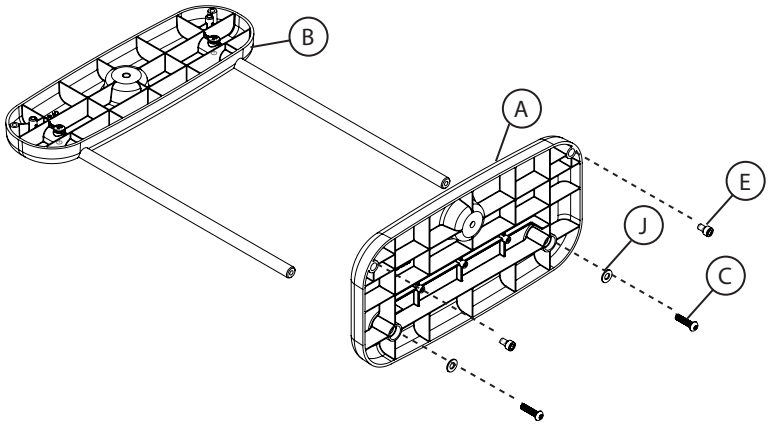

Secure Fan Unit to Mounting Bracket in Upward or Downward Orientation Depending on Bed Height

Upward Orientation

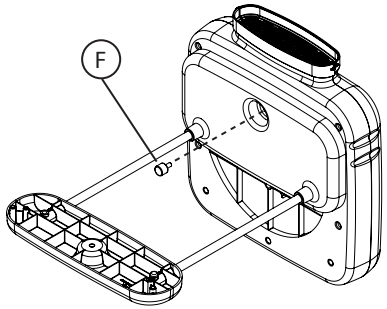

For Thick Mattresses

Downward Orientation

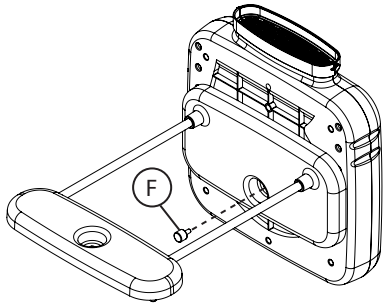

For Thin Mattresses

NOTE: Adjust fan unit height on bracket by selecting appropriate threaded insert (shown next page) such that the top of the unit is several inches below the top of the mattress.

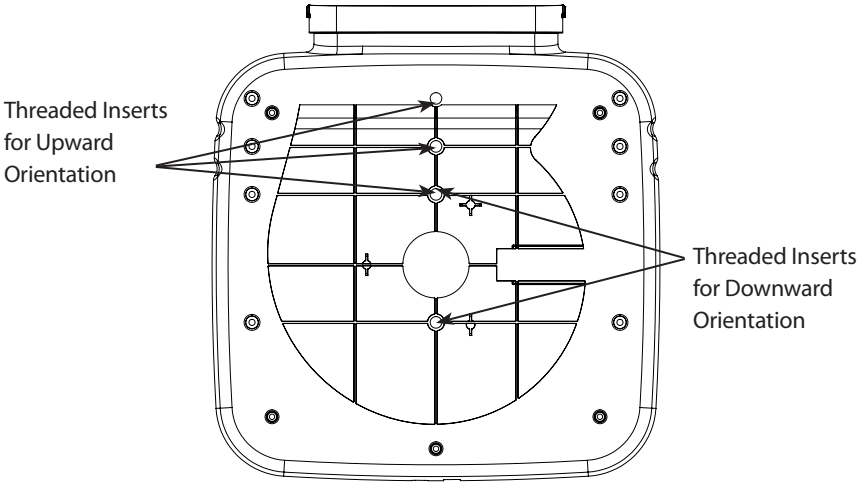

Slide Mounting Bracket Under the Mattress

Option C: Bed Rail Mount

Assemble Bed Rail Mounting Bracket

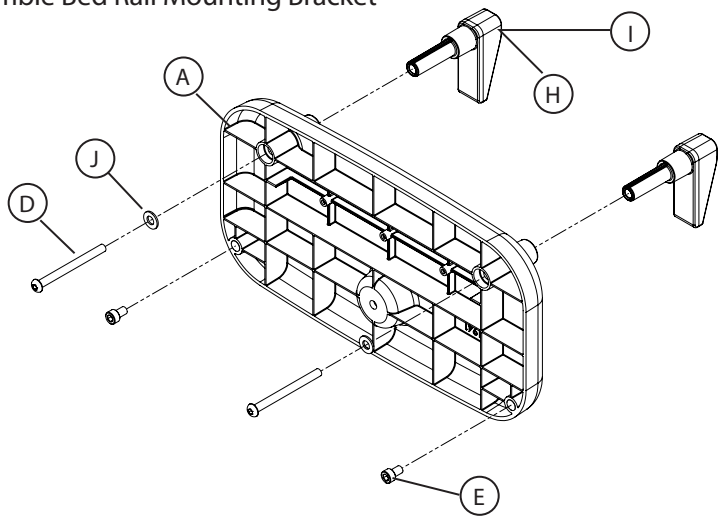

NOTE: Adjust fan unit height on bracket by selecting appropriate threaded insert (shown below) such that the top of the unit is several inches below the top of the mattress.

Adjust Spacing to Fit Bed Rail

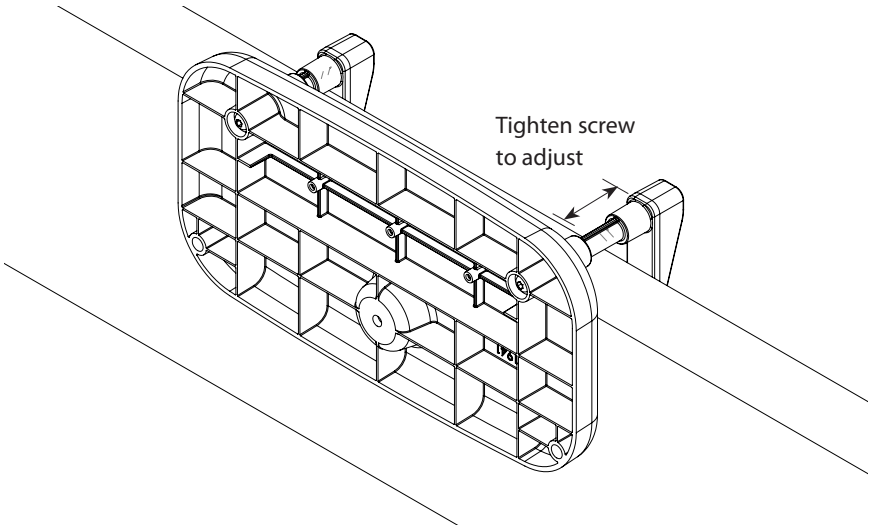

Secure Fan Unit to Mounting Bracket

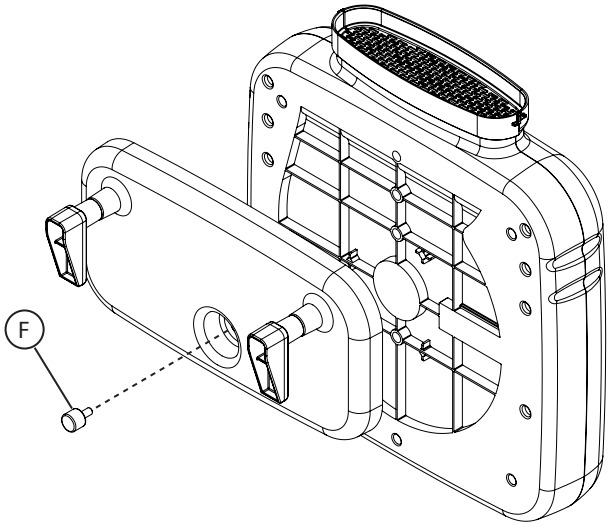

NOTE: Adjust fan unit height on bracket by selecting appropriate threaded insert (shown below) such that the top of the unit is several inches below the top of the mattress.

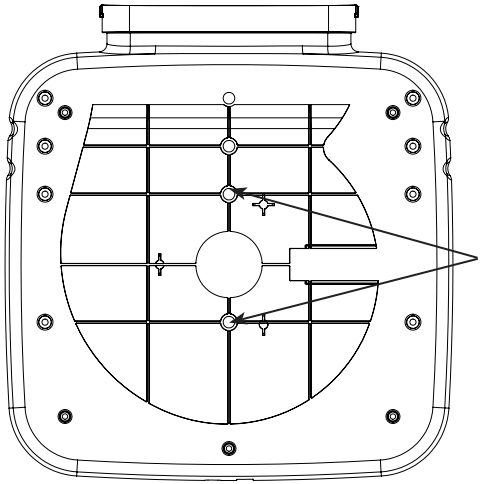

Hang Fan Unit on Bed Rail

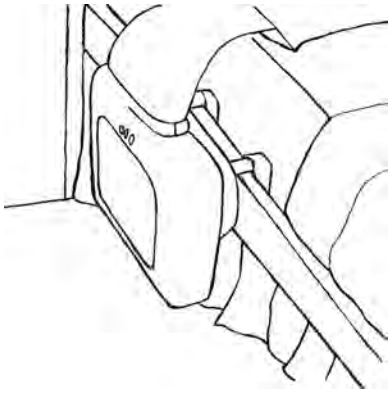

Dual Chambered Pillowcase Assembly

Insert Pillow into Zippered Pocket and Close Zipper

CAUTION: Use of a queen or king size pillow in a standard size dual chamber pillow case may damage the seams. Check dual chambered pillow case size on tag, which is located inside the zippered pocket.

Slide HEPA Filter into Pillowcase Sleeve

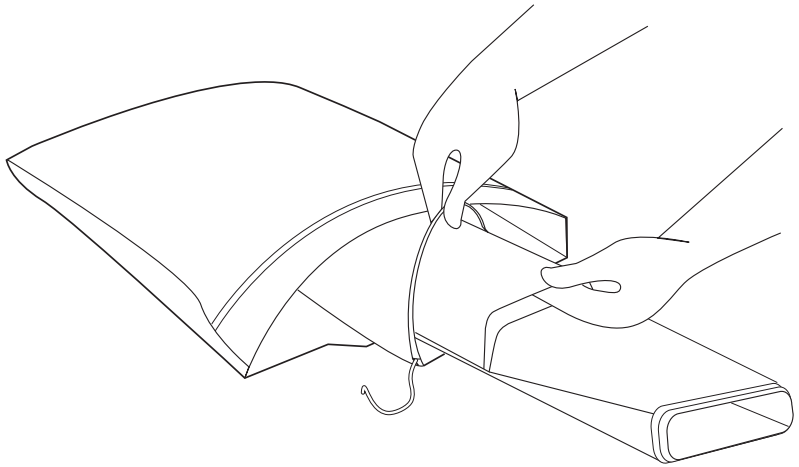

NOTE: Position HEPA filter so pleat faces upwards as shown.

Tighten Drawstring Directly Below Lip on Plastic Filter Body

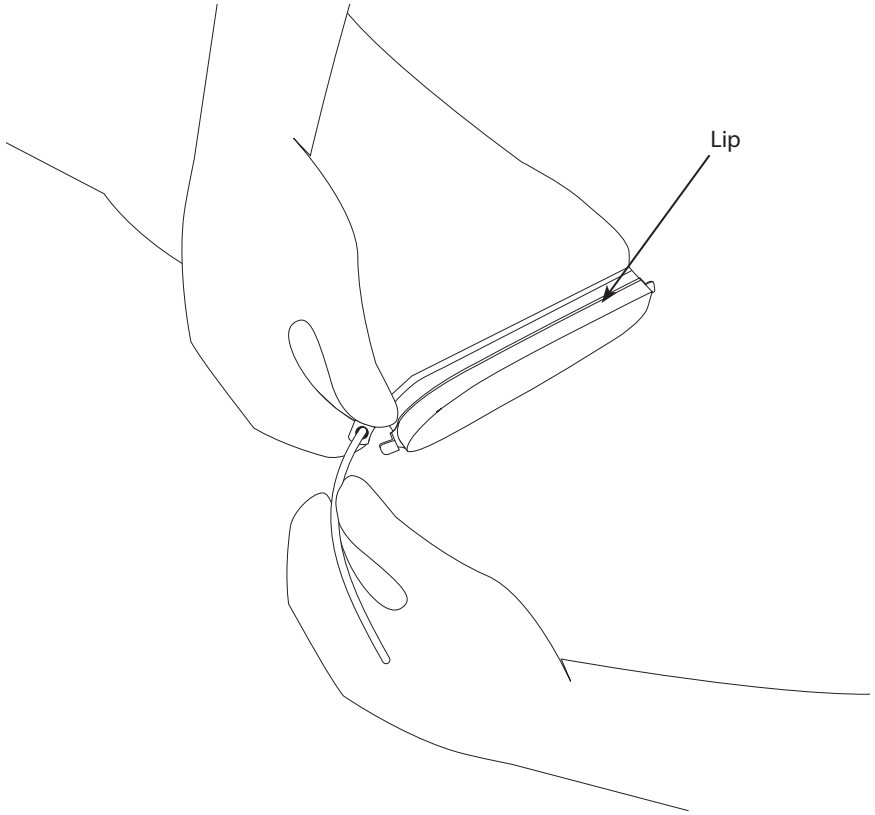

Snap Plastic Filter Body into Top of Fan Unit

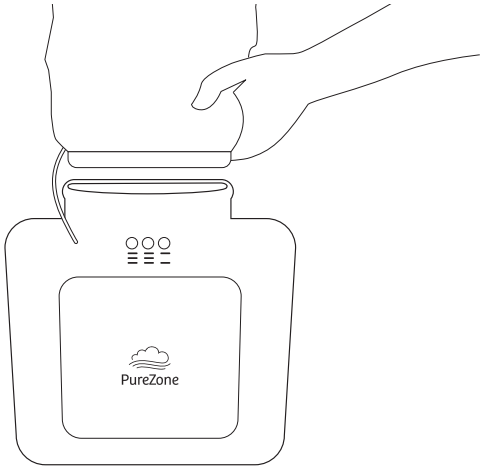

Plug Fan Unit Into Outlet and Operate Using Control buttons on the Fan Unit or Remote

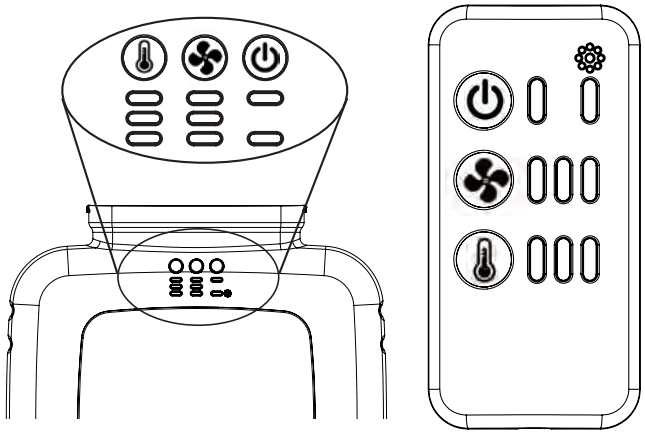

CAUTION: Do not operate any fan with a damaged cord or plug. Discard fan or return for examination and/or repair.

CAUTION: Do not run cord under carpet. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.

User Interface Symbols and Settings

Heater Setting (off, low, medium, high)

Fan Setting (low, medium, high)
Note: On startup, fan runs at high speed for 15 seconds and is then adjustable.

Power (off, on)

Change-Filter Indicator (change filter if lit)
NOTE: After 1500 hours of use, change filter indicator will activate. To reset, turn the fan unit on and hold down the heater and fan buttons simultaneously for 20 seconds.

Keep Intake Clear

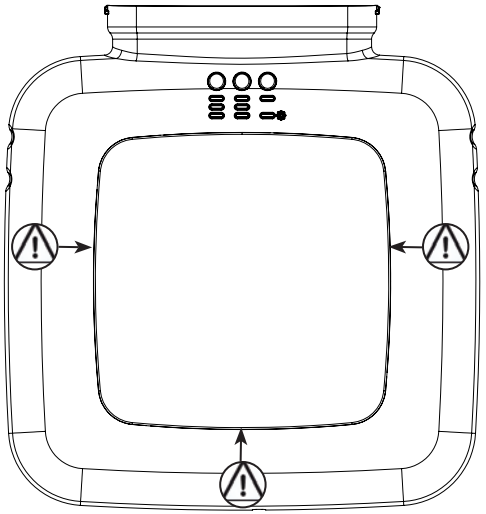

PRECAUTION: For proper airflow ensure that the fan unit intake is clear of bedding.

Cleaning and Maintenance

The pillowcase/filter assembly is designed for a quick disconnect from the fan unit by lifting the side tabs on the filter cowling. The pillowcase is launderable in cold or warm water. Do not use a fabric softener as the residue may block the airflow and interfere with performance. Do not wash the HEPA filter. Clean the pre-filter monthly by running it under cold tap water. The intake pre-filter is located under the plastic logo piece (Figure 1), which is snap-fit onto the fan unit. A new intake pre-filter is included with each replacement filter and should be changed with the HEPA filter every six months.

Figure 1

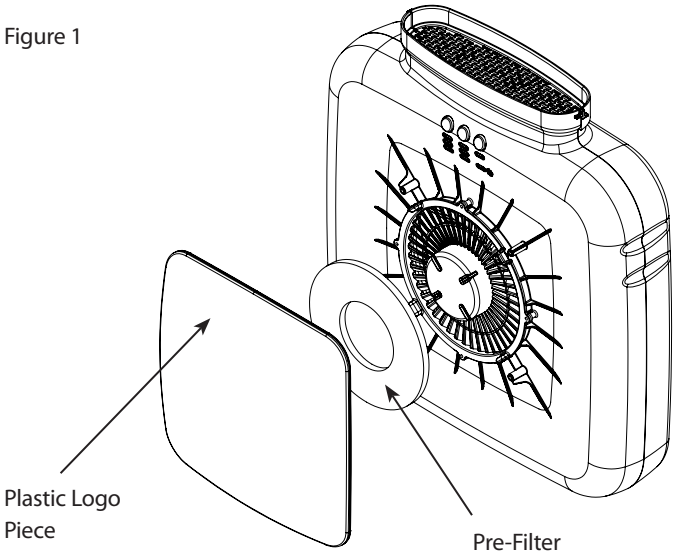

⚠ WARNING: To ensure proper operation, change the HEPA filter ever 1500 hours of use (approximately 6 months) according to the change filter indicator light.

⚠ CAUTION: The fan unit is an electrical appliance and should be unplugged before performing cleaning or maintenance to reduce the risks of electrical shock, injury or fire.

Troubleshooting

The system is working correctly when the pillowcase inflates with the airflow from the fan unit. If this is not the case, check the following troubleshooting tips or call customer service at 1-877-787-3977.

Problem	Solution
Pillowcase is not inflating but the fan unit is running.	The most common cause for this problem is a collapsed pillowcase sleeve that is restricting the airflow. 1. First, check that the pillowcase sleeve is not twisted. If twisted, untwist the pillow case to open the airflow path. 2. Make sure the fan unit is not too far away or too close to the pillowcase assembly. If so, move the fan unit to an appropriate distance from the pillowcase assembly. 3. Check that the intake pre-filter is not heavily loaded. If so, clean under cold tap water or replace. 4. Inspect pillow case for ripped seams or holes.
Fan unit is not turning on when I press the power button.	Check that the unit is securely plugged into the outlet. Also, check that the circuit breaker is active and has not been tripped either at the outlet if a protection circuit is in place or at the breaker where mains power is distributed.
The remote doesn't light up or work.	Check that the remote is firmly plugged into the connector at the bottom of the fan unit.
The lights on the fan unit are lit, but the system is not responding to commands from the user interface or remote.	Try unplugging the unit from the wall for 20 seconds before resuming normal operation to reset the software and processor.
I replaced the filter, but the change filter light is still lit on the fan unit.	You need to reset the change filter light. To do so, turn the fan unit on and hold the heat and fan speed buttons simultaneously for about 20 seconds (either on the fan unit or remote). This should reset the change filter light.
Heater and fan lights are blinking.	The Tilt Switch has engaged; unplug the unit from the wall outlet and then plug the unit back into the wall outlet to reset the Tilt Switch. This can occur if the unit is knocked over or is tipped more than 35 degrees.

Physical Characteristics

Package Dimensions	16.5" x 14.5" x 7"
Weight of Package	13 lbs

Temperature Characteristics

Temperature Control	Electronically controlled
Operating Airflows	Fan Set Points

Low fan	0.9 m^3/min	30 ft^3/min
Medium fan	1.1 m^3/min	40 ft^3/min
High fan	1.4 m^3/min	50 ft^3/min

Operating Temperatures — Heater Temperature Set Points

Low fan	27° ± 0.5° C	80.5° ± 1° F
Medium fan	33° ± 0.5° C	91.5° ± 1° F
High fan	40° ± 0.5° C	104° ± 1° F

NOTE: Heater set points do not reflect surface temperature of pillowcase. Use of warming option is to balance the natural cooling effect of the fan unit and is not considered to be a source of supplemental heat.

Safety System

Thermostat	The heater has dual over-temperature protection in the form of a bi-metallic cutout and thermal fuse.
Alarm System	Electronic protection from component faults and over-temperature are provided by the system software. Alarm conditions will result from the following events: • Measured output air temperature exceeds 60° C (alarm condition: heater light blinks and audible signal) • Heater malfunction (alarm condition: heater light blinks and audible signal) • Motor malfunction (alarm condition: fan control blinks and audible signal)

Electrical Characteristics

Power Consumption	Peak 145 Watts with heat Peak 20 Watts without heat
Power Cord	6 feet
Rating	1.17A, 60 hz, 120 volts
Diagnostics	The fan unit has no user serviceable parts except the pre-filter. Tampering with the seal on the fan unit or remote voids the warranty.

C SA® US

248115

Reordering Information

The filter change indicator light will turn on after 6 months of use (1500 hours of operation) to alert you that the HEPA filter needs replacing. You can order replacement HEPA filters and other PureZone System accessories at:

- Our website, www.purezone.com
- Or by phone, Toll-Free: 877-PURE-977

Warranty & Technical Support

The fan unit is warranted to be free of manufacturing defects for the life of the product. The pillow case is warranted to be free of defects for a period of two years. The warranty does not cover abuse or mishandling. See detailed limited warranty information on Terms and Conditions attached to the invoice. Call the technical support number below to receive a Return Material Authorization for any warranty claims.

PureZone™
Personal Air Filtration System

PureZone Technologies, LLC
6581 City West Parkway
Minneapolis, MN 55344
toll free 1-877-787-3977
info@purezone.com

©2009 PureZone Technologies, LLC. All rights reserved. 1945B.